


**Special Instructions:**

Install Canard Flap Hing Tip Mask PM-2027 First per the PM Research Installation Manual. Then Install Canard Flap Hing Leading Edge Tape "PM-T1". Install Tape Dry, Do not use wetting Solution.

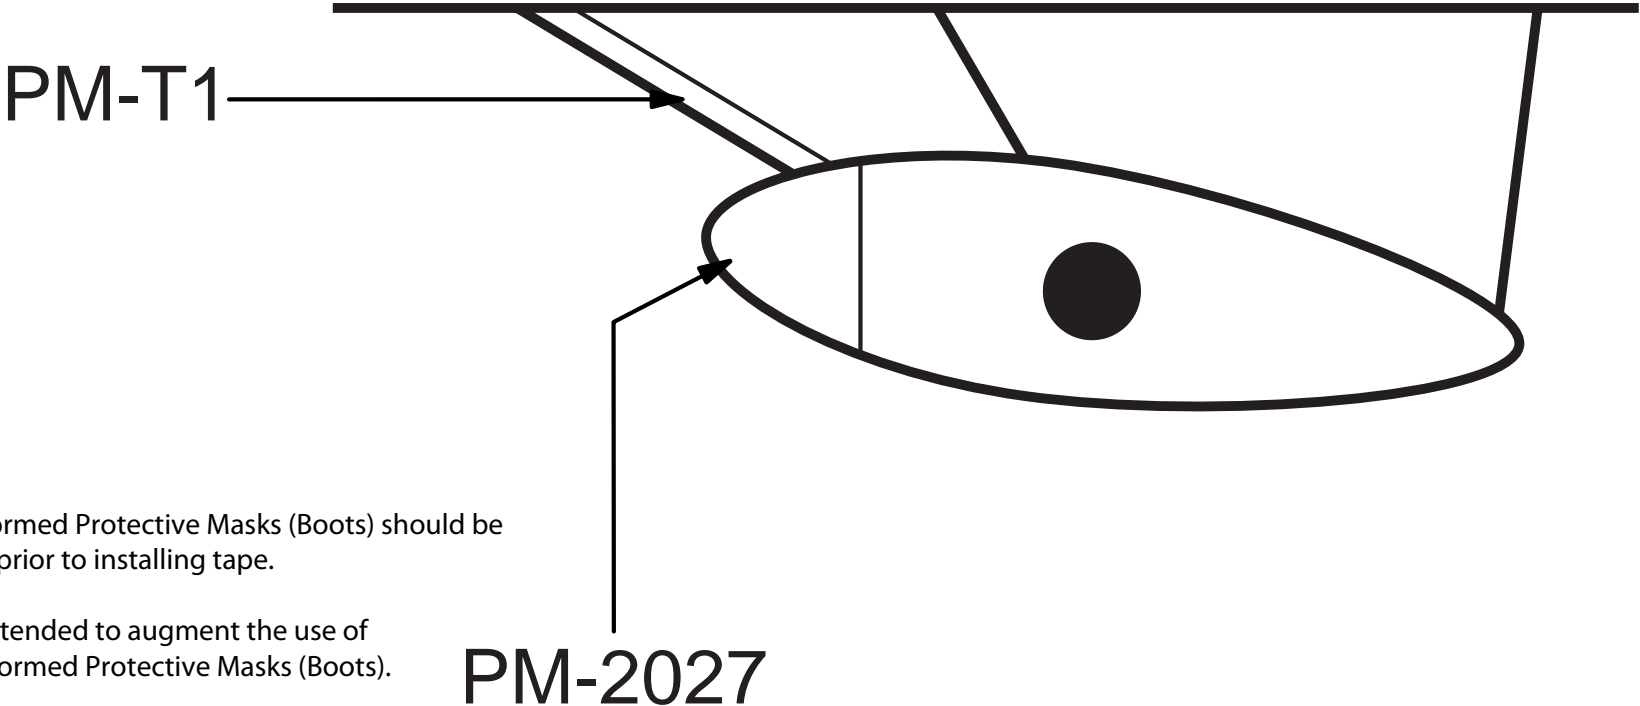

NOTE: All Pre-Formed Protective Masks (Boots) should be installed prior to installing tape.

NOTE: Tape is intended to augment the use of our Pre-Formed Protective Masks (Boots).

Cut tape to fit as necessary.