

# Piaggio Avanti P.180

## Special Instructions:

Reference the PM Research Installation Manual for tape installation and lap cutting procedures.

Install the tape over the stall strip starting at the center of the stall strip and work to the top of the wing then from the center to the bottom of the wing.

Cut the tape as shown in Diagram 1 then remove the pieces as shown.




Install tape on inboard and outboard wing butting the tape to the edge of the stall strip as shown in Diagram 2.

**CAUTION:** Be sure not to squeegee the wetting solution out until you complete the next step.

Lap cut the tape on each end. Then remove the pieces as shown in Diagram 2. Squeegee out any remaining wetting solution.

Diagram 3 shows what it should look like when you have installed the tape correctly.

Notice that there is no tape on either end of the stall strip as marked in Diagram 3.

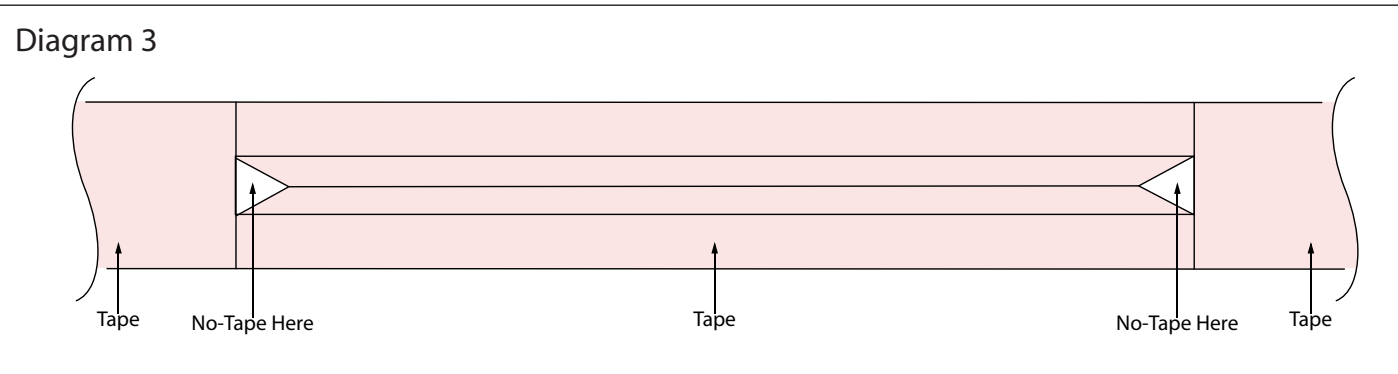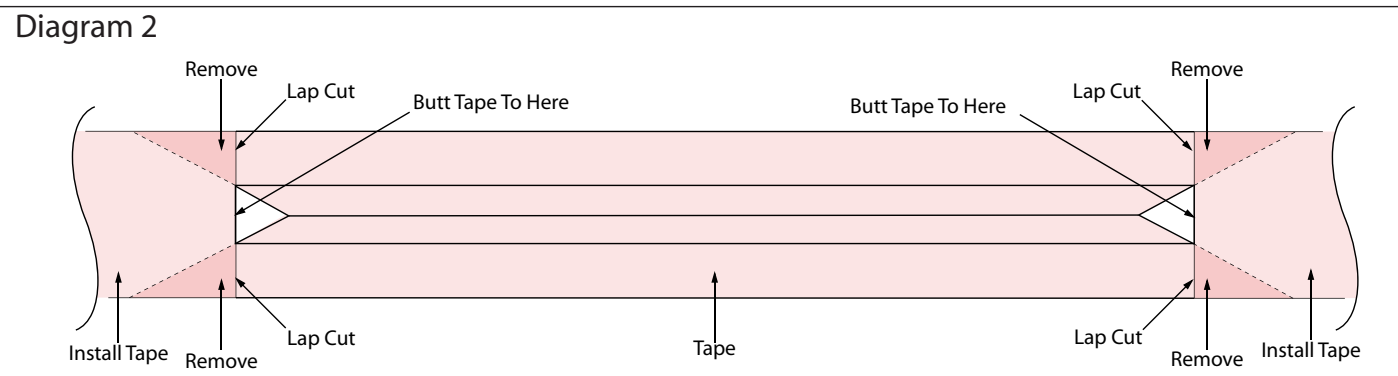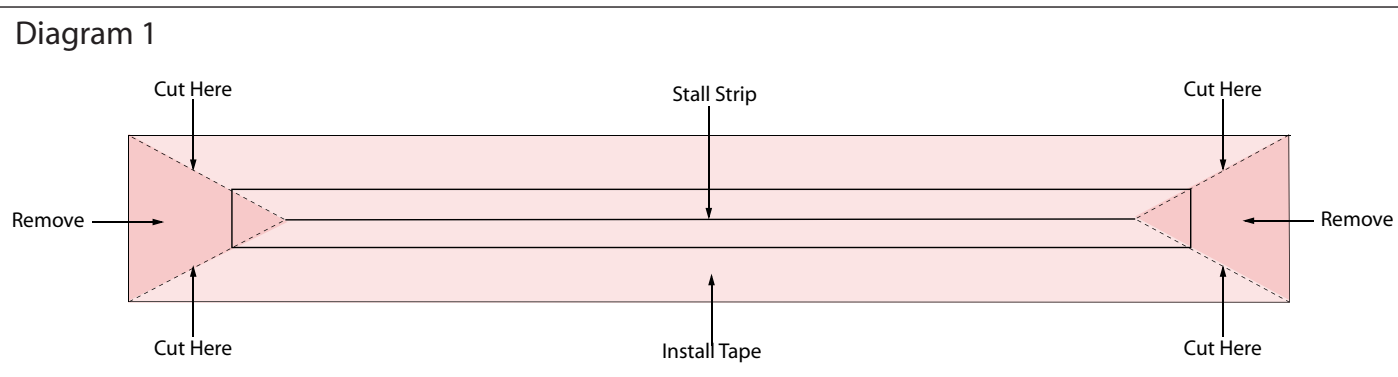

NOTE: All Pre-Formed Protective Masks (Boots) should be installed prior to installing tape.

NOTE: Tape is intended to augment the use of our Pre-Formed Protective Masks (Boots).

Cut tape to fit as necessary.